

Instructions Installing Cup Hooks

Supplies needed:

- ☐ Window Measurement Tracking Sheet
- ☐ Template and instructions for the type of attachment you plan to use
- ☐ Scissors for cutting out the template
- ☐ Masking tape
- ☐ Drill and 1/16" drill bit (*optional*)
- ☐ Cup hooks
- ☐ Pencil/pen

- ▶ Match your new shades to their windows based on your measurements.
- ▶ Print and cut out the templates.
Poke or punch a hole in the red dots, as shown by the green arrows.
- ▶ Take the top left template and align it with the top left corner of your window, outside the frame. *It's okay if the curve doesn't match, just make sure the "arms" of the template rest against the top and side of your window frame.*
- ▶ Use masking tape to secure it in place.
- ▶ Use a pencil/pen to mark in the hole you poked over the red dot.
- ▶ Remove the template.
- ▶ If you would like, pre-drill the holes using a 1/16" drill bit (*optional*).
- ▶ Place the screw end of the hook on the marked spot, using your fingers to tighten the screw gently. Use pliers to give yourself more leverage if you need it but do NOT over-tighten!
The hook should not wiggle, but not be embedded in the wall.
- ▶ Repeat with the other hook.
- ▶ To hang your shade, simply place the grommet over the hooks!




Need help? Email info@roamingshades.com.



Top Left Cup/Adhesive Hook Window Template

TOP

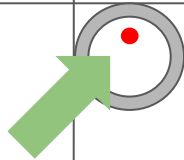

Top Right Cup/Adhesive Hook Window Template

TOP

