

# Instructions Installing Adhesive Hooks

## Supplies needed:

- ☐ Window Measurement Tracking Sheet
  - ☐ Template and instructions for the type of attachment you plan to use
  - ☐ Scissors for cutting out the template
  - ☐ Masking tape
  - ☐ Rubbing alcohol swabs or alcohol bottle and paper towel
  - ☐ Adhesive hooks
  - ☐ Pencil/pen
- 
- ▶ Match your new shades to their windows based on your measurements.
  - ▶ Print and cut out the templates.  
Poke or punch a hole in the red dots, as shown by the green arrows.
  - ▶ Use alcohol swabs or a paper towel dipped in rubbing alcohol to clean the areas where your hooks will go. This will help the hook adhere better.
  - ▶ Take the top left template and align it with the top left corner of your window, outside the frame. *It's okay if the curve doesn't match, just make sure the "arms" of the template rest against the top and side of your window frame.*
  - ▶ Use masking tape to secure it in place.
  - ▶ Use a pencil/pen to mark in the hole you poked over the red dot.
  - ▶ Remove the template and test fit the hook so the bottom of the hook aligns with the mark you made.
  - ▶ Remove one side of the adhesive backing and press it to the back of the hook itself.
  - ▶ Remove the other backing strip and press the hook firmly into place on the wall for 30 seconds.  
Repeat with the other hook.
  - ▶ Wait at least one hour to hang your shades, so the adhesive has a chance to stick. When you're ready, simply place the grommet over the hooks!


*Need help?* Email [info@roamingshades.com](mailto:info@roamingshades.com).





## Top Left Cup/Adhesive Hook Window Template

TOP

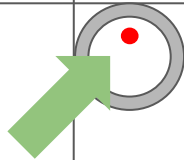

# Top Right Cup/Adhesive Hook Window Template

TOP

